

# GETRIEBEBAU NORD

Member of the NORD DRIVESYSTEMS Group

Getriebbau NORD GmbH & Co. KG  
Getriebbau-Nord-Straße 1 • 22941 Bargteheide, Germany • [www.nord.com](http://www.nord.com)

## SK TIE4-RJ12-RJ12

Part number: 275 274 601

**Connection cable connection extension**

### Scope of delivery

1 x	Connection cable	SK TIE4-RJ12-RJ12
-----	------------------	-------------------



### Field of use

This connection extension is used to connect a parameterisation unit to drive electronics devices from Getriebbau NORD GmbH & Co. KG. The connection cable is equipped with RJ12 plugs (6/6) on both ends.

### Use

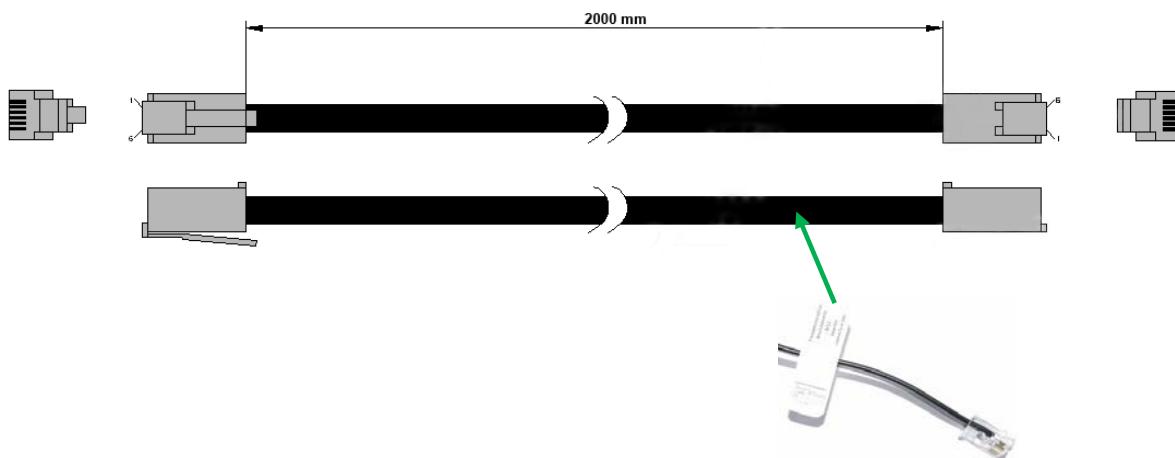
The connection cable connects the parameterisation unit with the communication interface of the device. The RJ12 plug without latching tab (see cable end with label) is connected to the diagnostic interface of the drive electronics and the other RJ12 plug (with latching tab) to the RJ12 socket of the parameterisation unit. This connection extension can be used for all NORD drive electronics.

### Technical data

Temperature range	-5 ... 50 °C
Protection class	IP20
Weight	46 g
Cable sheath material	Polyvinyl chloride (PVC)

Cable sheath colour	Black
Plug colour	Transparent
Plug	2x RJ12 (6P6C)
Cable length	2 m

Technical Information / Datasheet	SK TIE4-RJ12-RJ12			
Adapter cables		V1.0	4823	en

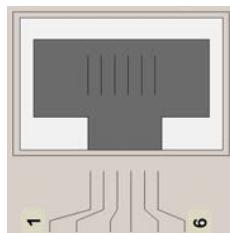
**Connections**


The connection extension is looped in between parameterisation unit ( 1 ) and the device ( 2 ).

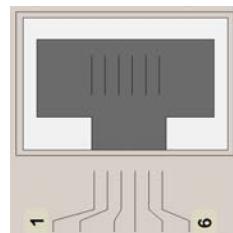
ParameterBox	Connection cable	Frequency inverter
SK PAR-3H 	SK PAR-3E 	NORDAC PRO SK 500P NORDAC PRO SK 500E NORDAC LINK SK 250E-FDS NORDAC LINK SK 155E-FDS NORDAC ON SK 300P NORDAC FLEX SK 200E NORDAC BASE SK 180E
<b>SimpleControlBox</b>		<b>BUS connection unit</b>
SK CSX-3H 	SK CSX-3E 	SK TI4-TU-BUS 
<b>Parameterisation units</b> ① (RS 485 interface)	<b>Connection extension</b> (enclosed with parameterisation unit)	<b>Communication interface</b> ② (RS 485 interface)

**( 1 ) RJ12 – RS485 details**

RJ12 pin	Signal	Description
1	A (+)	RS485_A
2	B (-)	RS485_B
3	GND	Ground
4	n.c.	
5	n.c.	
6	+24 V-	24 V ± 20%


**( 2 ) RJ12 – RS485 details**

RJ12 pin	Signal	Description
1	A (+)	RS485_A
2	B (-)	RS485_B
3	GND	Ground
4	n.c.	
5	n.c.	
6	+24 V-	24 V ± 20%



## Information

### Connection to the NORDAC START SK 135E

The NORDAC START has only one RS232 interface. The optional SK TIE4-RS232-RS485 interface converter connection extension is required for the connection.

For detailed information, refer to the Technical Information  [TI 275274603](#).

The connection cable is 6-pole and is also used for connection to RS232 interfaces.

#### *RJ12 – RS232 details*

RJ12 pin	Signal	Description
1	A (+)	RS485_A
2	B (-)	RS485_B
3	GND	Ground
4	TXD	Transmission data
5	RXD	Receive data
6	+24 V-	24 V ± 20%

